

Media Player **AL460**

User Manual

For your Safety

Warning

- To prevent electric shock or other injury, please do not disassemble or repackage this product.
- To prevent a fire, electric shock, or device malfunction, please do not use this product in a wet environment such as a bathroom.
- During operation, do not expose the product in areas above 35°C (95°F) or below 5°C (41°F).
- Avoid placing the product near a source of heat or in an area with strong magnetic fields or excessive vibration, or exposing it to sunlight (even through windows).
- Never insert any metallic subject into the device to avoid any risk of electrical shock, fire, short-circuiting or dangerous emission.
- This product is an electronic device; please avoid dropping it or subjecting it to other severe shock.
- Do not place heavy objects on the top of the product or use excessive force on it.
- Do not use an AC adapter other than the one provided with the retail package. Any damage caused by unauthorized adapters will void the warranty.
- Do not operate electronics with wet hands.
- Do not bend cables in a sharp angle.
- Do not overload wall outlets.
- Do not stack the media player on another audio / video appliance such as a TV.

Notice

- Carefully unpack the contents of the product package.
- This device is not for in-car entertainment use. Unstable power or vibration may damage this device.
- Keep this device unreachable for children.
- Keep this device and its accessories away from heat sources.
- Unplug media player from the electrical outlet when unused for long periods of time or if there is a risk of lightning.

Table of contents

For your Safety	2
Chapter 1 Introduction	1
Features	1
System Requirements	1
Chapter 2 Package Contents	1
Chapter 3 The Remote Control	2
Changing the Battery of the Remote Control	2
Buttons	2
Parts and Functions	4
Chapter 4 Quick Start	5
Chapter 5 USB Connection	6
Mounting the USB External Storage.....	6
Partition of the USB External Storage	6
Media Files for Playback	7
Chapter 6 TV Connection	8
Connecting to AV Equipments	8
Chapter 7 Main Menu	11
Chapter 8 Setup	11
Chapter 9 Playing Media	20
Chapter 10 Playing Movies	22
Chapter 11 Playing Music	24
Chapter 12 Playing Photo	26
Chapter 13 Troubleshooting	28
Chapter 14 Service and Support	31
Chapter 15 Product Specifications	31

Chapter 1 Introduction

Features

- ☐ Plays back most media file formats.
- ☐ Plays media files from your PC via network.
- ☐ Supports USB external storage devices.
- ☐ Supports both NTFS and FAT32 file system.
- ☐ Supports both NTSC and PAL TV systems.
- ☐ Supports video output to full-HD 1080p.
- ☐ Supports HDMI and component video output.

System Requirements

Storage media: USB Flash Drive / USB external HDD/USB card Reader

Minimum Allocation Unit Size: 4096 bytes

 
Chapter 2 Package Contents

<input type="checkbox"/> Media Player AL460	x 1
<input type="checkbox"/> Quick Install Guide	x 1
<input type="checkbox"/> CD	x 1
<input type="checkbox"/> Remote Controller	x 1
<input type="checkbox"/> Composite Audio/Video Cable (Yellow/Red/White)	x 1
<input type="checkbox"/> Component Video Cable (Green/Red/Blue)	x 1
<input type="checkbox"/> LAN Cable	x 1
<input type="checkbox"/> AAA Battery	x 2
<input type="checkbox"/> Power Adapter	x 1

Chapter 3 The Remote Control

Changing the Battery of the Remote Control


If the battery becomes depleted, change the battery according to the following instructions:

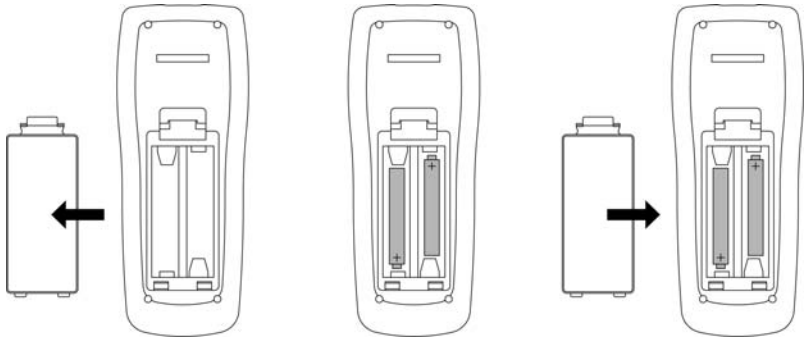

Buttons

POWER	POWER on or off the media player.
HOME	Return to the main menu.
MUTE	Mute audio output, and press again to resume.
DISPLAY	Display current status, including track number and time elapsed/remaining.
SETUP	Enter the Setup Menu directly to change system settings.
VOL + / -	Volume up/down.
Navigational	Press the arrow buttons to navigate the menus.
ENTER	Press to select confirm in menus.
PLAY	Play the media files.
STOP	Stop the playback.

 Navigational

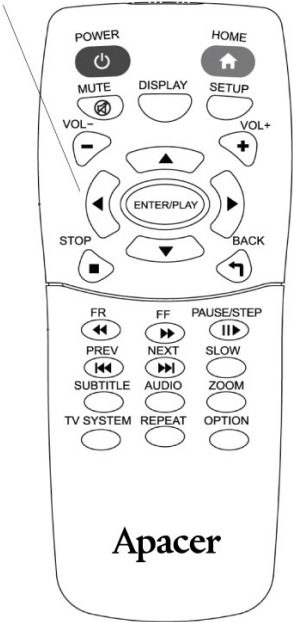

BACK	Return to the previous screen when navigating the menus.
FAST	Press to fast rewind or fast forward the current playback.
REWIND/FAST FORWARD	Press repeatedly to select faster rewind or fast forward speeds.
PAUSE/STEP	Press to pause current playback. Press again to step to the next frame. Press PLAY button to resume playback.
PREVIOUS	Press to go the previous file when playing media. Press to page up the file list at File Browser.
NEXT	Press to go the next file when playing media. Press to page down the file list at File Browser.
SLOW	Slow motion playback. Five slow motion levels (3/4x, 1/2x, 1/4x, 1/8x, 1/16x) are available. Press PLAY button to resume regular playback.
SUBTITLE	Press to activate available subtitles when play the DIVX file.
AUDIO	Select audio channel output.
ZOOM	Zoom in/out when playing back Photos or Video programs. Photo zoom levels: 2X, 4X, 8X, 16X. Video zoom levels: 2X, 3X, 4X, 8X.
TV SYSTEM	Press to switch between NTSC, PAL, 480P, 576P, 720P, 1080i, 1080P.
REPEAT	Press to set repeat option.
OPTION	Select Return, Rename and Delete the file.



Parts and Functions






- | | |
|---|---|
| 1 Remote receiver: | When using the remote, point the remote towards here. |
| 2 Power and access indicator: | Blue Lights up: The power is on.
Red Lights up: The media player is in standby mode. |
| 3 Power connector: | Connect to the AC adapter. (DC 12V, 2A) |
| 4 USB 2.0 type A connector: | Connect to a USB Flash drive or a an external USB HDD. |
| 5 HDMI connector: | Outputs digital video/audio signals with a HDMI cable. (cable not provided) |
| 6 Component video output connector: | Outputs component video signals with a provided special cable.
The colors of the jacks are green, blue and red. |
| 7 Composite audio/video output connector: | Outputs composite video/audio signals with a provided special cable. The colors of the jacks are yellow, red and white. |
| 8 LAN connector: | 10/100 Ethernet port. |
| 9 Power ON/OFF Switch: | Turn ON/OFF the device. |

Chapter 4 Quick Start


How do I use this device?

Copy media files from your computer to a USB storage device, and then connect it to this device. Then connect this device to your TV or Home Theater. The User Interface is somewhat intuitive like a Browser. Try starting with  and  buttons.

How do I play media files on my TV?

1. Connect this device to your TV with correct cables.
2. Plug the AC adapter into the Power Connector to turn it on.
3. Press the Power ON/OFF Switch button on the media player to turn on it.
4. Press the  button on the remote control to activate this device.
5. Press “**TV/Video**” button on the TV remote control to switch the correct video source (HDMI/AV/Component).
6. Browse with  and  buttons.

What if my TV screen displays unstable image?

Press the **TV SYSTEM**  button on the remote control of the media player to switch output TV system.

How to configure settings?

Press the **SETUP**  button.

What if I have more questions to ask?

Go to the **[Troubleshooting]** chapter, and read detailed descriptions in this manual.

Chapter 5 USB Connection

Mounting the USB External Storage

Compatibility

- 1. This device supports FAT16/32, and NTFS file systems.
- 2. This device supports USB external HDDs and USB Flash drives.
- 3. This device does not support USB external CD/DVD/BD/HDDVD/other ODD drives.

Mounting of a USB External Storage

This device automatically mounts a USB external storage connected.




Partition of the USB External Storage

For information of partitioning and formatting of the USB external HDD, please read the following:

	NTFS	FAT32
Playback Partition	Plays only the first Primary Partition	Plays only the first Primary Partition
Minimal Allocation Unit Size	4096 bytes	4096 bytes
Single file size limitation	2TB	4GB
Partition size limitation	2TB	2TB (Windows Vista/XP/2000: 32GB)*

 The Minimal Allocation Unit Size can be set up in Format dialogue box in Windows.

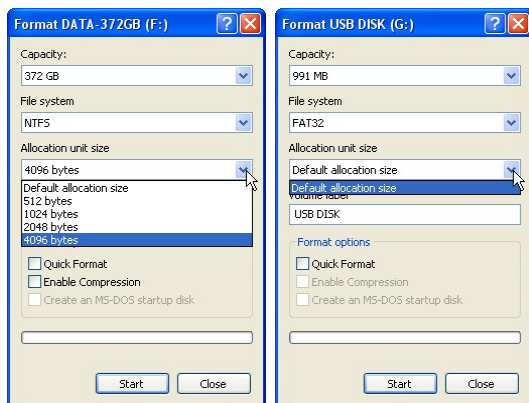

- * The Disk Management of Windows Vista/XP/2000 can only create a FAT32 partition up to 32GB.

Media Files for Playback

This device can play back the following media files:

Video	Photo**	Audio	Subtitle
MPEG-1 (MPG/DAT), MPEG-2 (AVI/ISO/IFO/MPG/VOB), MPEG-4 (AVI/Xvid/ASP/AVC HD/H.264), WMV, FLV, MKV, RM/RMVB, TS, m2ts, mts, TP, MJPEG, MOV, VC-1	JPEG BMP GIF TIF PNG	MP3 WMA WAV LPCM/PCM AAC OGG Dolby Digital AC3*	SRT SUB SMI SUB+IDX SSA

* 2-Channel only

**TIF: The media player just support RAW Data Mode only.

GIF/PNG: The media player don't support interlace and animation mode.

 
Chapter 6 TV Connection

Connecting to AV Equipments


HDMI Connection

The HDMI connector can output both digital audio/video signals. Many HDTV sets and digital AV receivers support this type of connection. (HDMI cable not provided)

To a TV:

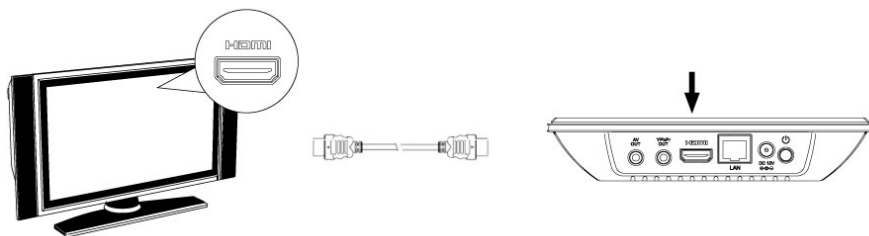

To an AV receiver:

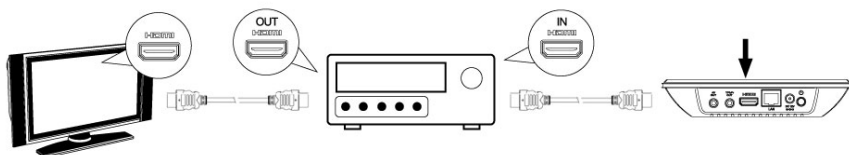 


If the HDMI cable is disconnected in playback, this device will stop playback immediately.

Note: Some TV sets are equipped with DVI input ports, which will receive video signals only, but these DVI ports use HDMI connectors instead of standard DVI connectors. If you find no audio signal output while using HDMI connection, connect the Composite Audio Connection or the Coaxial Audio Connection as an auxiliary.

Composite Audio/Video Connection

The composite audio/video is compatible with most TV sets and AV amplifiers (receivers.)
Yellow: Video signal; White: Left audio channel; Red: Right audio channel.

 
1. Connect one end of the composite (Red, White, Yellow) cable to the player's composite jack.
2. Connect the other end to your television's composite jack.

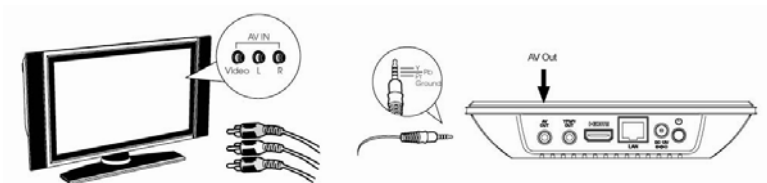

Component Video Connection (Y/Pb/Pr)

If your TV supports Component Video input (Y/Pb/Pr), you can connect it for better video quality. You will have to connect the audio cable for audio output.

 
1. Connect one end of the component (Green, Blue, and Red) cable to the player's component jack.
2. Connect the other end to your television's component jack.
3. Connect one end of the composite (Red, White, Yellow) cable to the player's composite jack.
4. Connect the other end to your television's composite jack.

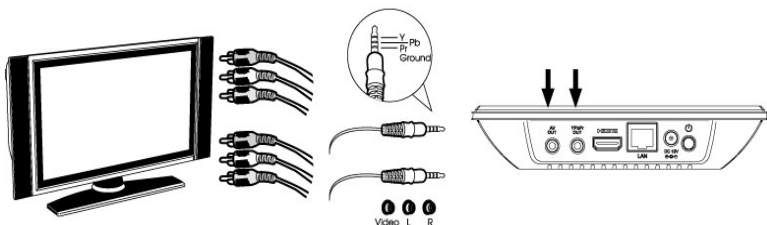

Note: Some TV sets are equipped with separate composite and component audio inputs. Be sure that you have connected the correct one.


Power Connection

 1. Make sure the power switch is off.
2. Connect the DC jack of the AC adapter to the connector marked “DC 12V”, plug the other end into an electrical outlet.

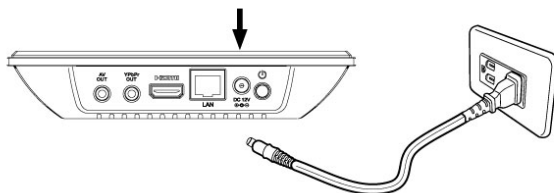

Network Connection

 1. Connect one end of the Ethernet cable to the player's **LAN** connector.
2. Connect the other end of the Ethernet Cable to your networking device.

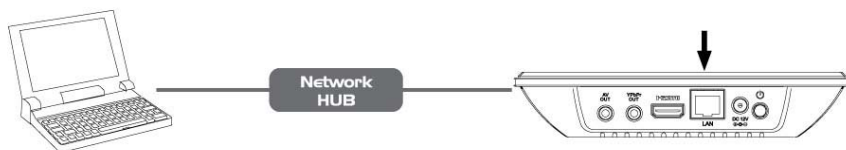

Power on/off


1. Power on

Press the power switch which is located on the back of the device. After the player is on, the power indicator on the front panel will light up. The device will then boot to the media player's user interface.







2. Power off

Press the power button on the remote control. The user interface of the media center will be off, but the unit will still be on. This is indicated when the power led light is red. Press the power switch that is located in the back of the device to turn off the device completely.

Note: If the setting of the video output is incorrect, the TV screen will not display normally.

Switch to correct setting by pressing the  button to switch output TV system.


Chapter 7 Main Menu

1. Power on the media player.
2. After a few second, the system will enter a main menu. To enter the main menu, press  on the remote control too.
3. Press  or  to select **All, Music, Movies, Photo, Setup** option on the main menu, and press   to select. Press  to enter.







Chapter 8 Setup

The **Setup** option allows you to configure music, video, network, photo and system settings.

Select **Setup** option on the main menu or select  on the remote control to enter the **Setup** menu.








AUDIO SETUP

Press  or  on the remote control to select the **Audio** option from the vertical bar. Press  to enter or press  to exit.



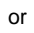


Night Mode

This function reduces the maximum dynamic audio range.

1. Press  to enter.
2. Press  or  to enable or disable the function or **Comfort**.
3. Press  to confirm or press  to exit.



Digital Output




1. Press  to enter.
2. Press  or  to select from HDMI RAW or HDMI LPCM to enable or disable the function.
3. Press  to confirm or press  to exit.



HDMI LPCM: It is the original bit stream and will provide a better audio output quality.






HDMI RAM: It is the default setting, and provides 2 channels audio output.

VIDEO SETUP

Press  or  on the remote control to select the **Video** option. Press  to enter.

Aspect Ratio

Use it to select the way videos are displayed.

1. Press  to enter.
2. Press  and  on the remote control to select from Pan Scan 4:3, Letter Box 4:3, or 16:9.
3. Press  to confirm or press  to exit.








Pan Scan 4:3: Display a wide picture on the entire screen and cuts off the redundant portions. Select when a standard 4:3 TV is connected.

Letter Box 4:3: Display a wide picture with two black borders on the top and bottom of 4:3 screen. Select when a standard 4:3 TV is connected.

16:9: Compress the image to convert the whole image. Select when a 16:9 TV is connected.






Brightness

Select to set brightness levels.

1. Press  to enter.
2. Press  or  to adjust brightness. The new setting is previewed on screen.
3. Press  to confirm or press  to exit.






Contrast

Select to set contrast levels.

1. Press  to enter.
2. Press  or  to adjust contrast. The new setting is previewed onscreen.
3. Press  to confirm or press  to exit.

 
DNR

Select to adjust DNR.

1. Press  to enter.
2. Press  or  on the remote control to select “Off” to disable this function or “Auto” to active it.
3. Press  to confirm or press  to exit.



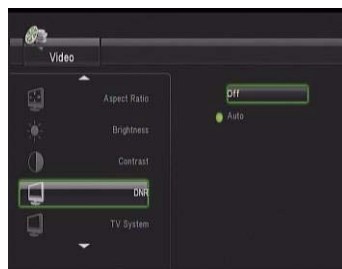


Note: DNR (Dynamic noise reduction) --- Digital

video is compressed in the compression process, DVD may occur in some parts of the naked eye can see the video noise, DNR can effectively reduce the static picture for the (background) on a slight flicker and improve picture stability sex.



TV System

Use it to select the video display resolution.

1. Press  to enter.
2. Press  and  on the remote control to set the TV system, depending on your TV resolution.
3. Press  to confirm or press  to exit.



- Note:
- By pressing **TV SYSTEM** button on the remote control, the video output format can be switched in the following sequence: **NTSC** ⇨ **PAL** ⇨ **480P** ⇨ **576P** ⇨ **720i** ⇨ **720P** ⇨ **1080i** ⇨ **1080P** and so on. If you find the display incorrect, try this method to get back to standard NTSC or PAL video output, and then configure the video setup correct.
 - NTSC: TV color encoding system for United States, Canada, Japan, Mexico, Taiwan and so on.
 - PAL: TV color encoding system for Europe, South America, India and so on.





1080P 24Hz

 
Use it to select the video display resolution.

If your video file is 1080P 24Hz, suggest to enable this option. It could provide the better video display resolution.





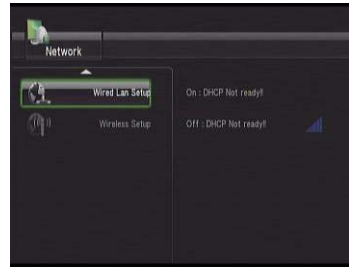

Network Setting

Press  or  on the remote control to select the Network option. Press  to enter, or press  to exit.



 
Wired Lan Setup

Select to set the Network Setting. Before use the Network functions, please check following items:






1. Connect the this device to Network first.
2. Please enable NetBIOS of TCP/IP on computer.
3. Please turn off your PC's firewall.
4. Please share the folders which you wish to browse in your PC.
5. Press  to enter **Wired Lan Setup**.
6. Press  and  to select **DHCP IP (AUTO)** or **FIXED IP (MANUAL)**.
7. Press  to confirm or select **Cancel** to exit.

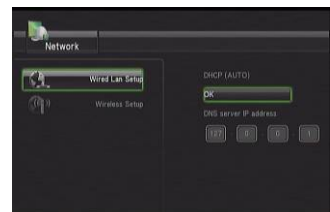

DHCP DNS (Auto): Set the DNS server IP address by auto.
Press  to confirm.












Fix IP (Manual): Using Fixed IP, it is required to enter IP address, Subnet Mask, Default Gateway. For further assistant to above settings, please check local network setting.

1. Press  to enter the entry screen and press   to enter the IP address, and select **OK** to confirm.
2. Press  to confirm or press  to exit.

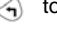

Wireless Setup

Before configuring the WLAN settings, please check the following:

1. Make sure the WLAN USB Adapter is connected to the USB port.
2. Make sure there is a wireless router or an AP (Access Point) on the network, or your PC is equipped with a wireless network adapter/card.
3. Make sure media player is in the effective range of the WLAN.
4. Press  to enter **Wireless Setup**.
5. Press  or  to select a **Profile Name**. Press  to enter **Connection Mode**. Press  to return.
6. Press  or  to select Infrastructure (AP) or Peer to Peer (Ad Hoc) mode.
7. Press the  button for next step or press the  button to return.



Infrastructure (AP): It is used to connect computers with wireless network adapters, also known as wireless clients, to an existing wired network with the help from wireless router or access point.

 
Get SSID Name

System will search for an existing SSID (Service Set Identifier) auto. And select the access point you wish to access from the SSID list.

Note: In the Security list, WEP (Wired Equivalent Privacy) and WPA (Wi-Fi Protected Access) means the network is encrypted, i.e. an encryption key is needed to access the network. NONE means it is an open system network.

Select Open System if the network is not encrypted. Otherwise, select Shared Key (WEP) or WPA Key to enter the encryption key.

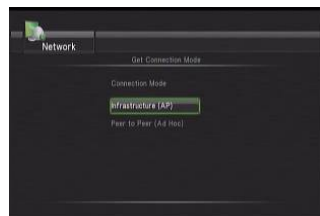

Select SSID the system will get the IP address automatically. The test will take for a while, please be patient to wait. If the test is ok, the network information will be displayed.




Peer to Peer It is used to connect wireless clients
(Ad Hoc): directly together, without the need for a
wireless router or access point.

Ad Hoc Setup

Set the Wireless SSID, Wireless Security,
and Host IP for the Ad Hoc connection.

Press  to enter. Press  to
return.




Note: Both the player and your PC need
to use the Ad Hoc mode, share a
common SSID, and be put into the same
IP range.

Select  to confirm and go to the
next step.

If the test is ok, the network information
will be displayed.








System Setting

Press  or  on the remote control to
select the System option. Press  to enter.



Menu Language






Use it to select the OSD (On Screen Display)
language.

1. Press  to enter.
2. Press  or  to select the language.
3. Press  to confirm or press  to exit.



Text Encoding






Use it to select to choose the subtitle encoding language. (Please check your subtitle encoding format and make sure the subtitle files are located in the same folder first.)

1. Press  to enter.
2. Press  or  to select the subtitle language.
3. Press  to confirm or press  to exit.

 


System Upgrade

Use it to upgrade firmware from USB device.



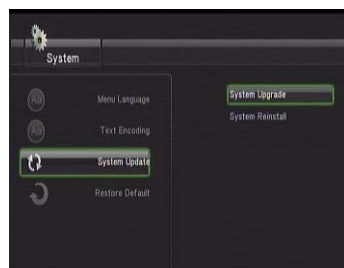

1. Please copy the Upgrade firmware to USB device first.
2. Press  to enter.
3. Press  or  to select **System Upgrade** or **System Reinstall**.
4. Press  to confirm or press  to exit.

 
Note: Don't switch off the power during upgrading.






Restore Default

Use it to restore factory defaults.

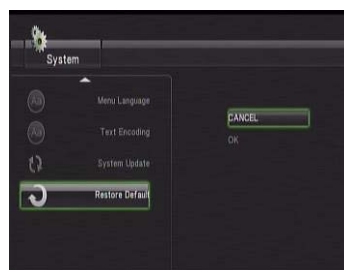1. Press  to enter.
2. Press  or  to select **OK** or **Cancel**.
3. Press  to select **OK** to restore all settings to defaults.








MISC Setting

Press  or  on the remote control to select the MISC option. Press  to enter.

Resume Play






Use it to resume playback.

1. Press  to enter.
2. Press  or  to enable **(ON)** or disable **(Off)** this function.
3. Press  to confirm or press  to exit.



Slide Show Time







Select to set photo slide show time.

1. Press  to enter.
2. Press  or  to select interval photo time you require.
3. Press  to confirm or press  to exit.



Transition Effect






Select to set the transition effect of photos.

1. Press  to enter.
2. Press  or  to select effect option.
Press  to confirm.
3. Press  to confirm or press  to exit.



Background Music






Use it to select to play the music file and view photo at the same time.

1. Press  to enter.
2. Press  or  to enable **(ON)** or disable **(Off)** this function.
3. Press  to confirm or press  to exit.



Screen Saver






Screen Saver could save power.

1. Press  to enter.
2. Press  or  to enable **(ON)** or disable **(Off)** this function.
3. Press  to confirm or press  to exit.



Movie Preview






Movie Preview function could help you preview movie on files browser window.

1. Press  to enter.
2. Press  or  to enable **(ON)** or disable **(Off)** this function.
3. Press  to confirm or press  to exit.











Chapter 9 Playing Media

 
All option allows you browse and play music, photo and movie files stored on the external USB devices or your PC **(Network)**.

1. Press  or  buttons to select **All** function on the main menu, press  or  to select the external **USB** devices or **Network**. Press  to enter.



USB



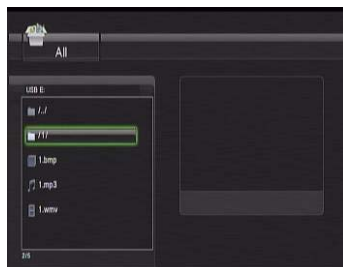






1. Press  to enter **USB** option.
2. Press  or  to select the external USB devices which the media is stored. Press  to confirm.
3. All directories and supported media files will be displayed. Press  or  to select the directory or file you wish to view, and press  to play or press  to exit.

 


Network

You can streaming playback the multimedia files shared on the local area network.


At first, please make sure that you have read "Network Setting" and made the right settings.


1. Press  to enter **Network** option.
2. Press  or  select the multimedia files shared at your PC name in your local workgroup. Press  to confirm.
3. Enter User ID and Password, press  to confirm.
4. All directories and supported media files will be displayed. Press  or  to select the directory or file you wish to browse, and press  to play or press  to exit.

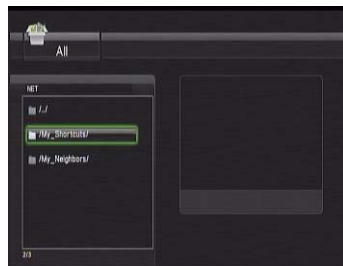





My_Shortcuts

 Use it to set the shortcuts to login PC.

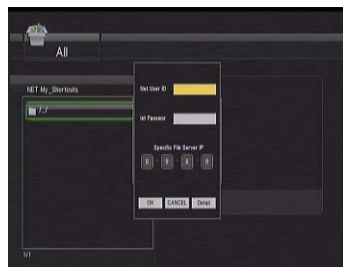  1. Press  to enter edit screen.
2. Select "Add" and "Modify" to set Net User ID, Net Password, and Specific File Server IP for adding or modifying the shortcuts.
3. Select "Delete" to delete the shortcuts.





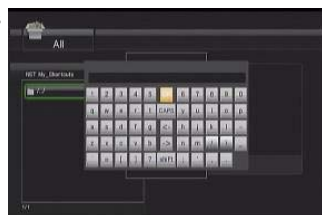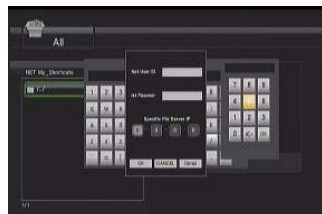






- Note:
1. Select Net User ID and Password, the entry screen will appear.
Press the Navigation buttons to select letters and numbers. Select **CAPS** to toggle between uppercase and lowercase letters. Press <- to delete a letter. Press -> to insert a space. Press the  to input each letter or number. Select **OK** and press the  to confirm all changes.

 


2. While browsing high definition video files (resolution up to 720p / 1080i / 1080p) via Ethernet or WLAN, the video might be buffering. It is normal due to the limit of network speed or signal strength.
3. Due to different network conditions, sometimes the workgroup might not be accessed or shown in the list. You could use 'My_Shortcuts' to browse shared files.

Chapter 10 Playing Movies

You could watch videos on your TV with using the Media Player.

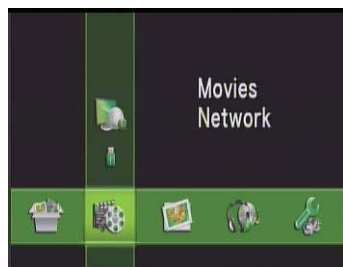


1. If you want to playback movies, press  or  to select **Movies** or **All** option on the main menu, press  to confirm.
2. Press  or  to select the device which the media is stored from **USB** or **Network** and press the  to confirm.
3. Press  or  to select the folder or movies, press  to play. The movie is played in full screen.



Note: If you play a video files that has been partially played before, you are promoted to choose whether to play the file from the beginning or resume playback from the last playback position.








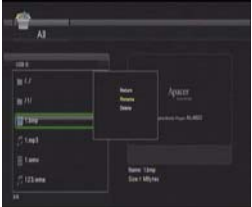





Movies Playback controls

Use these buttons on the remote control to control media playback:

Button	Function
Stop	Stop the playback.
Enter/Play	Play the media files.
FR/FF	Press to fast rewind or fast forward the current playback. Press repeatedly to select faster rewind or fast forward speeds: 1.5x, 2x, 4x, 8x, 16x, 32x. Press PLAY button to resume playback.
PAUSE/STEP	Press to pause current playback. Press again to step to the next frame. Press PLAY button to resume playback.
PREV	Press to go the previous files when playing movie.
NEXT	Press to go the next file when playing movie.
SLOW	Slow motion playback. Three motion settings are available. Five slow motion levels (3/4x, 1/2x, 1/4x, 1/8x, 1/16x) are available. Press PLAY button to resume regular playback.
AUDIO	Select audio channel output.
ZOOM	While movie is played in full screen mode, you can press the ZOOM button to zoom in/out the image. Four zoom levels are available. Video zoom levels : 2X, 3X, 4X, 8X. Press BACK button to resume.
SUBTITLE	Select Subtitle directly.
SETUP	Enter to Setup sub-menu. Press  or  to select Audio, Video, Network, System and MISC options. Press  to confirm or play BACK button to resume playing.
REPEAT	Press REPEAT button to set repeat option - Chapter, Title, All or Off.



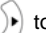







Movies Playback Options

Repeat	Repeat Chapter/Title: Play current media file repeatedly. Repeat All: Play all media files stored inside unit repeatedly. Repeat Off: Disable Repeat function
--------	---

Option	<p>Use it to organize your files at file browser.</p> <ol style="list-style-type: none"> 1. Press  or  to select the file or folder, press  to enter. 2. Press  or  to select Return, Rename and Delete. Press  to enter. <p>Return: Exit Option menu.</p> <p>Rename: Enter new name. Press OK option to change or press  to exit.</p> <p>Delete: Delete the file.</p>  
Displaying the Video information	Press DISPLAY button on the remote control to show the media information. Press again to hide the information.
Subtitle	Press  or  to zoom in/out the subtitle size and press  or  to adjust subtitle position.

Chapter 11 Playing Music







You could listen music on your TV using the Media Player.

1. If you want to playback music, press  or  buttons to select **Music** or **All** option on the main menu, press  button to confirm.
2. Press  or  to select the device which the media is stored from **USB** or **Network** and press the  to confirm.
3. Press  or  to select files that you want to listen. Press  to play or press  to exit.








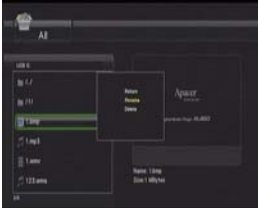



Music Playback controls

Use these buttons on the remote control to control media playback:










Button	Function
Stop	Stop the playback.
Enter/Play	Play the media files.
FR/FF	Press to fast rewind or fast forward the current playback. Press PLAY button to resume playback.
PAUSE/STEP	Press to pause current playback. Press PLAY button to resume playback.
	Press to go the previous files, and press PLAY button to play.
	Press to go the next file, and press PLAY button to play.
SETUP	Enter to Setup sub-menu. Press  or  to select Audio, Video, Network, System and MISC options. Press  button to confirm or play BACK button to exit.
REPEAT	Press  to set Repeat function - Repeat 1, All and Off.

Music Playback Options

Repeat	<p>Repeat 1: Play current media file repeatedly. Repeat All: Play all media files stored inside unit repeatedly. Repeat Off: Disable Repeat function.</p>
Option	<p>Use it to organize your files at file browser.</p> <ol style="list-style-type: none"> Press  or  to select the file or folder, press  to enter. Press  or  to select Return, Rename and Delete. Press  to enter. <p>Return: Exit Option menu. Rename: Enter new name. Press OK option to change or press  to exit. Delete: Delete the file.</p>  
Displaying the Video information	Press DISPLAY button on the remote control to show the media information. Press again to hide the information.

Chapter 12 Playing Photo

You could browse photos on your TV using the Media Player.

- 1. If you want to view Photos, press  or  buttons to select **Photo** or **All** option on the main menu, press  button to confirm.
 - 2. Press  or  to select the device which the media is stored from **USB** or **Network** and press the  to confirm.
 - 3. Press  or  to select files that you want to browse. Press the  to confirm.
- The photo is displayed in full screen.

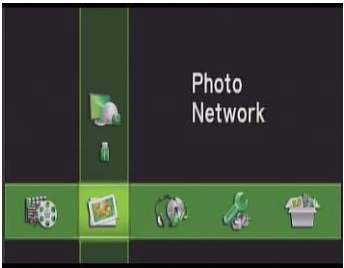 


Photo Playback controls

Use these buttons on the remote control to control media playback:














Button	Function
Stop	Stop the playback.
Enter/Play	Play the media files.
PAUSE/STEP	Pause current playback. Press again to resume playback.
PREV	Press to go the previous photo file when browsing photo.
NEXT	Press to go the next photo file when browsing photo.
ZOOM	While Photo is played in full screen mode, you can press the ZOOM button to zoom in/out the image. Four zoom levels are available. Photo zoom levels: 2X, 4X, 8X, 16X, Fit. Select Fit option to resume.
SETUP	Enter to Setup sub-menu. Press  or  to select Audio, Video, Network, System and MISC options. Press  button to confirm or press BACK button to resume playing.



Photo Playback Options


Rotate	Press  or  or  or  to rotate the photo.
--------	---

Option	<p>Use it to organize your files at file browser.</p> <ol style="list-style-type: none"> 1. Press  or  to select the file or folder, press  to enter. 2. Press  or  to select Return, Rename and Delete. Press  to enter. <p>Return: Exit Option menu.</p> <p>Rename: Enter new name. Press OK option to change or press  to exit.</p> <p>Delete: Delete the file.</p>  
Photo Slideshow	<p>Enter MISC option to set Slideshow Time function. When the photo is displayed in full screen mode, the slide show starts automatically.</p>
Transition Effect	<p>Enter MISC option to set Photo Transition Effect function.</p>
Photo Background Music	<p>Enter MISC option to enable "Background Music" function. While listening to MP3 files, you can browse the photos at the same time.</p>
Displaying the Video information	<p>Press DISPLAY button on the remote control to show the media information. Press again to hide the information.</p>

Chapter 13 Troubleshooting

Problem	Possible Cause	Solution
TV screen does not display normally.	<ul style="list-style-type: none"> Video setting is not correct. 	<ul style="list-style-type: none"> Press the TV SYSTEM button to switch output TV system.
No power. (All LEDs are off)	<ul style="list-style-type: none"> The power plug is not properly connected. 	<ul style="list-style-type: none"> Check the power connection and plug it again.
Can't operate with the remote control.	<ul style="list-style-type: none"> If this device cannot be activated by pressing  button of remote control, it is probably because the power is off. Remote control is not pointing toward the remote receiver. Battery is not assembled properly. Battery became depleted. 	<ul style="list-style-type: none"> Refer to "Power Connection" section for its solution. Point the remote control toward the receiver when in operation. Check the battery direction. Replace the battery.
Some folders are not listed in files manager windows.	<ul style="list-style-type: none"> These folders may be "Hidden", "Encrypted", "Compressed" or "System Folder". 	<ul style="list-style-type: none"> Change the attribute of these folders, or create another folder.
Some files can't be played back.	<ul style="list-style-type: none"> These files are compressed by Windows. The formats of these files are not supported. These files are damaged. 	<ul style="list-style-type: none"> Uncompress them. Convert these files to the supported format. Replace them with undamaged ones.
The SETUP MENU appears to be in an unrecognizable language.	<ul style="list-style-type: none"> Incorrect Menu LANGUAGE setting. 	<ul style="list-style-type: none"> Check the Menu LANGUAGE setting in SETUP MENU.
No image.	<ul style="list-style-type: none"> Video cable is not connected. Incorrect video setting. 	<ul style="list-style-type: none"> Check video connection. Press the TV SYSTEM button to switch output TV system.

Problem	Possible Cause	Solution
Can't change audio or subtitle language of a movie.	<ul style="list-style-type: none"> ⦿ This movie comes with only one language. 	<ul style="list-style-type: none"> ⦿ Check the contents.
No audio output.	<ul style="list-style-type: none"> ⦿ Audio cable is not connected. ⦿ Volume is too low. ⦿ Playing in fast forward, in rewinding or in slow motion. ⦿ Incorrect TV audio input channel. ⦿ Incorrect audio channel. ⦿ TV set is equipped with DVI input ports only, but these DVI ports use HDMI connectors instead of standard DVI connectors. 	<ul style="list-style-type: none"> ⦿ Check audio connection. ⦿ Increase volume. ⦿ Resume normal playback speed by pressing  button. ⦿ Some TV sets equip with separate composite and component audio inputs. Be sure that you have connected the correct one. ⦿ Press AUDIO  button on the remote control to select the correct audio channel. ⦿ connect the Composite Audio Connection or the Coaxial Audio Connection instead.
The audio or subtitle is not the language you have selected.	<ul style="list-style-type: none"> ⦿ This movie doesn't come with the selected language. 	<ul style="list-style-type: none"> ⦿ Press AUDIO or SUBTITLE to select another language.
Can't fast forward, rewind, slow motion, step play.	<ul style="list-style-type: none"> ⦿ Some movie files prohibit these operations. 	
Distorted booting image or incorrect color while playback.	<ul style="list-style-type: none"> ⦿ The video output is set to 720p while using the composite video output. 	<ul style="list-style-type: none"> ⦿ Set the video output to NTSC or PAL.
DVD menu behaves incorrectly, such as blank	<ul style="list-style-type: none"> ⦿ The DVD Folder lacks some files for this function. 	<ul style="list-style-type: none"> ⦿ Press STOP button to stop playing, and then select the

Problem	Possible Cause	Solution
screen or repeated segments.		VIDEO_TS file. Press the  button to play the Main Title directly.

Problem	Possible Cause	Solution
The attached USE devices are not visible.	<ul style="list-style-type: none"> ⊗ The USB device's file system is not supported. 	<ul style="list-style-type: none"> ⊗ Make sure the file system is FAT or NTFS.
The media Player could not connect your PC via network.	<ul style="list-style-type: none"> ⊗ The network is not detected. ⊗ The PC is not detected. 	<ul style="list-style-type: none"> ⊗ Check your network setting. ⊗ Go to Apacer website to download TranscodeServer.exe.

Chapter 14 Service and Support

Please contact our local distributor or our customer service center, if you have any technical problems.

Customer Service Center: <http://www.apacer.com>

Chapter 15 Product Specifications

Specifications

STORAGE

USB devices	USB Flash drive / USB external HDD
File System	FAT32 or NTFS

INTERFACE

USB	USB 2.0 type A Connector	x 2
LAN	10/100 Ethernet Connector	x 1

AUDIO/VIDEO INTERFACE

HDMI	HDMI connector x 1
Composite output	Video + Audio R/L (3.5mm phone jack x 1)
Component Video	Y, Pb, Pr (3.5mm phone jack x 1)

MEDIA SUPPORT

Audio	MP3, WAV, WMA, LPCM/PCM, AAC, OGG, Dolby Digital AC3
Video	MPEG-1 (MPG/DAT), MPEG-2 (AVI/ISO/IFO/MPG/VOB), MPEG-4 (AVI/Xvid/ASP/AVC HD/H.264), WMV, FLV, MKV, RM/RMVB, TS, m2ts, mts, TP, MJPEG, MOV, VC-1
Photo	JPEG, BMP, GIF (not support interlace/animation mode), TIF (Raw

	Data mode Only), PNG (not support interlace/animation mode)
DivX Subtitle	IDX/SUB, SRT, SSA, SUB, SMI
DVD Folder	DVD Menu/Audio/Subtitle

MAX CONTENT RESOLUTION

Video	1920 x 1080 pixels
JPEG	4608 x 3456 pixels
MP3	320kbps

VIDEO OUTPUT

TV	NTSC / PAL
Screen Ratio	4:3 / 16:9
Component	480p / 576p / 720p (50/60Hz) / 1080i (50/60Hz) / 1080P (50/60 Hz)

AUDIO OUTPUT

Analog Audio	Stereo
Digital Audio	HDMI LPCM/RAW DATA OUTPUT

POWER SUPPLY

Input	AC 100-240 V, 50/60Hz
Output	DC 12V, 2A

BATTERY OF REMOTE CONTROL

AAA batteries

WORKING ENVIRONMENT

5°C ~ 35°C, Humidity 8% ~ 90%

STORAGE ENVIRONMENT

0°C ~ 65°C, Humidity 5% ~ 95%

GENERAL

Dimensions	165 (L) x 160 (W) x 35 (H) mm
Weight	310g



Specifications are subject to change without notice.

“This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.”



Media Player **AL460**

The copyright on this user manual remains with out company. No part of this user manual may be transmitted, reproduced or changed. The product specifications, design and this user manual's content are subject to change without notice.